

Step 1




Determine the location of the Wheel Stop and sweep the surface clean of debris / dust. Use chalk to mark the Hole Place.

Step 2




Drill the holes with 14MM diameter and 120MM depth.

Step 3

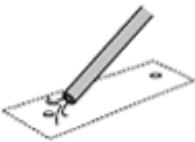

Make sure the holes are clear of dust and debris before installing the shields.


Step 4

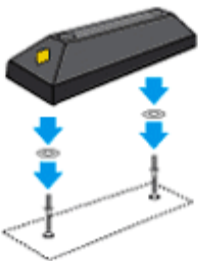

After each hole is drilled, insert a plastic shield in order to keep the units from shifting.

Note: (A portable blower is useful for this purpose)

Step 5

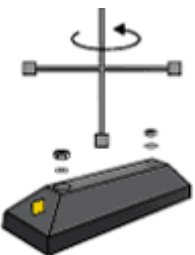

Insert the bolts and steel washers into the product installation holes and tighten every element.